


Read Me First

WPJ344 5V Cable & Power Options User Manual

1. On-board 5V Introduction

After connecting the jumper, WPJ344 can directly provide on-board 5V to the radio card.

接上跳帽后主板可以直接给网卡提供 5V 供电

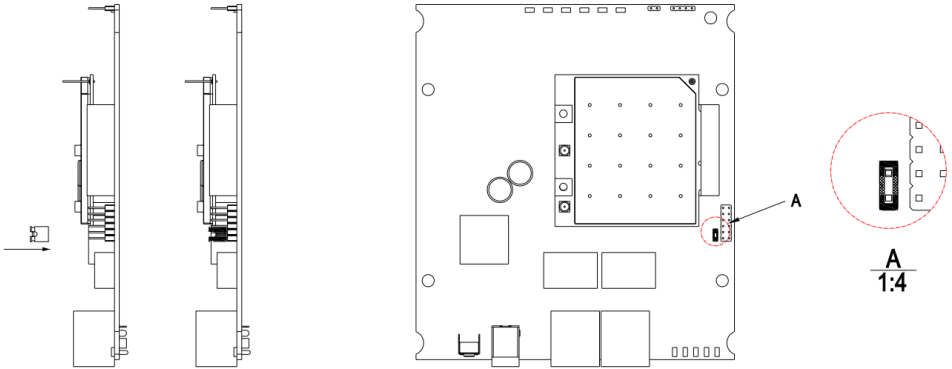

2. External 5V Introduction

Using the 5V cable can provide external 5V power for miniPCIe radio

使用跳线，可以为网卡提供外接 5V 供电

