


Read Me First

WPJ558 5V Cable User Manual


1. On-board 5V Introduction

After connecting the jumper, WPJ558 can directly provide on-board 5V to the radio card.
 接上跳帽，WPJ558 主板可以直接给网卡提供 5V 供电

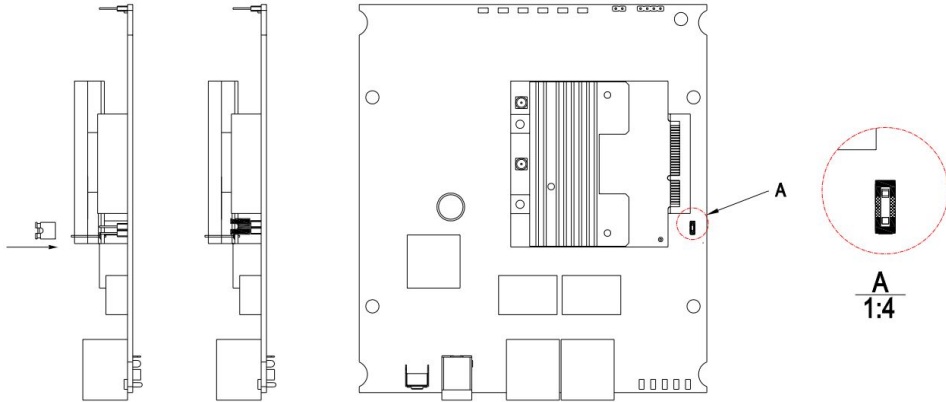

2. External 5V Introduction

Using the 5V cable can provide external 5V power for miniPCIe radio.
 使用跳线，可以为网卡提供外接 5V 供电

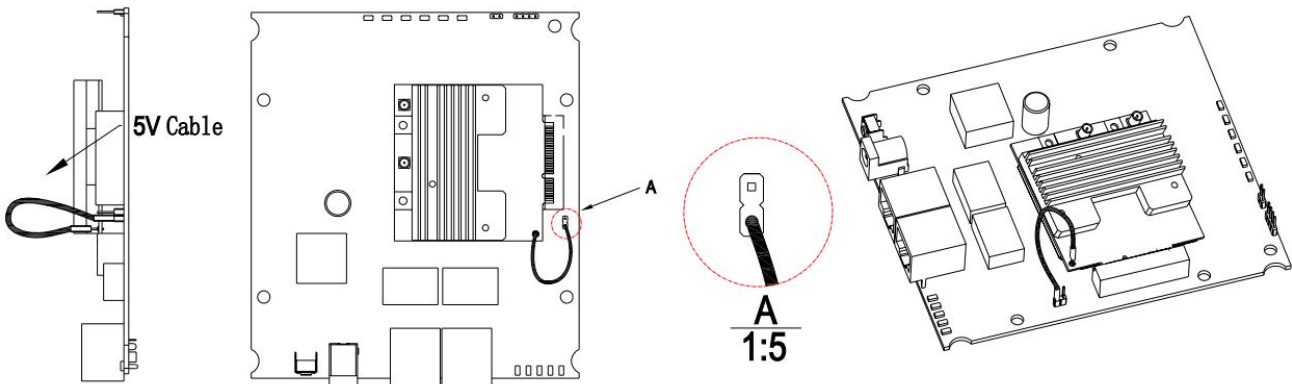

3. Pinout for WPJ558 PCIe slot

45 47 49 51 pin are 5V pin, they must be used together in order to provide 5V power to radio card.
 45 47 49 51 pin 为 5V pin, 组合使用可以给网卡进行 5V 供电

