## **Firmware Upload Guide**

1, Connect router LAN and computer WAN with cable ,



2,Keep pressing RESET button with sharp tool, then connect DC power adapter. Please wait for 15 seconds to boot up router. (Attention: Keep pressing RESET , and do not release it during 15 secs )





3,Set the computer TCP/IP in to static IP 192.168.1.X . (X can be any number between 2 to 255 ), and Subnet mask into 255.255.255.0.

Connect using:		
Realtek PCIe FE Family Controller	You can get IP settings assigned this capability. Otherwise, you nee the appropriate IP settings.	automatically if your network supports ed to ask your network administrator for
This connection uses the following items:	O Obtain an IR address autom	atically
Client for Microsoft Networks	Use the following IP address:	
✓ B file and Printer Sharing for Microsoft Networks ✓ B QoS Packet Scheduler	IP address:	192.168.1.22
There internet Protocol (TCP/IP)	S <u>u</u> bnet mask:	255 . 255 . 255 . 0
I <u>n</u> stall Uninstall P <u>r</u> operties	Default gateway:	2 4 2
Description	O Obtain DNS server address	sutematicallu
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication	Use the following DNS server addresses:	
across diverse interconnected networks.	Preferred DNS server:	
Show icon in notification area when connected	Alternate DNS server:	
Notify me when this connection has limited or no connectivity		dig

4, Open browser.Key in 192.168.1.1,come into"Firmware recovery mode" as below picture. Click "Browse" button to find the firmware .Then flash it .

Update for zbt 7628 V1.0.0
Don't power off the done e during update, if everything goes well, the device will restart.
這須文件 未选择任何文件 Update firmware
U-Boot is very important, please be sure to update this device!!!
选择文件 未选择任何文件 Update U-Boot
ART/factory is very important!
选择文件 并选择任何文件 Update ART

Attention:During uploading time , don't move or power off the router !! Otherwise will cause the router dead !!

5, About 100 seconds , the file upload success . And the router will automatic restart.

Update in progress
Your file was successfully uploaded! Update is in progress and you should wait for automatic reset of the device. Update time depends on image size and may take up to a few minutes. You can close this page.
$\circ$

6,Set the computer TCP/IP into automatic obtain IP.

Connect using:			
Bealtek PCIe FE Family Controller	Internet Protocol (TCP/IP) P	roperties 🛛 🛜	
his connection uses the following items:	General Alternate Configuration		
Glient for Microsoft Networks      Bile and Printer Sharing for Microsoft Net      BQoS Packet Scheduler      Thternet Protocol (TCP/IP)	You can get IP settings assigned this capability. Otherwise, you nee the appropriate IP settings.	automatically if your network supports ad to ask your network administrator for	
	Obtain an IP address automatically		
Install Uninstall	Use the following IP address:		
Description	IP address:		
Transmission Control Protocol/Internet Protocc wide area network protocol that provides comr across diverse interconnected networks.	S <u>u</u> bnet mask:		
	Default gateway:		
Show icon in notification area when connecte	Obtain DNS server address	automatically	
Notity me when this connection has limited or	O     Use the following DNS server	er addresses:	
	Preferred DNS server:		
UK	Alternate DNS server:	· · ·	